

По вопросам продаж и поддержки обращайтесь:

Алматы (7273)495-231
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89
Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48

Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курган (3522)50-90-47
Курск (4712)77-13-04
Липецк (4742)52-20-81
Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Новосибирск (383)227-86-73
Ноябрьск (3496)41-32-12

Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Пермь (342)205-81-47
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саранск (8342)22-96-24
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35

Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35
Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Улан-Удэ (3012)59-97-51
Ульяновск (8422)24-23-59
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +7(7172)727-132

Киргизия +996(312)96-26-47

сайт: www.honeywell.nt-rt.ru || эл. почта: hwn@nt-rt.ru

КОНТРОЛЛЕРЫ


Технические характеристики на EASYSET EDC201/ EDC202/EDC203



PrecisionLine Controllers EDC201 / EDC202 / EDC203

EASYSET DIGITAL CONTROLLERS

Specification 51-52-03-48, July 2015

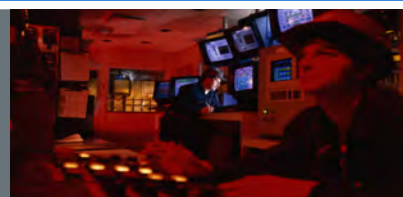

Introduction

The EDC201, EDC202 and EDC203 controllers provide precise temperature control, and are available in standard 1/16 DIN, 1/8 DIN and 1/4 DIN panel size formats. Vivid and large 4-digit displays and keypad buttons enable intuitive product use and configuration.

The controllers are fully dedicated to monitor and control temperatures in a wide range of applications such as environmental chambers, furnaces, ovens, dryers, packaging machines in plastics and the food and beverage industries.



Features

Vivid Display

Large 4-digit displays provide clear and bright viewing of PV, SP, adjustable decimal position, °C or °F and configuration parameters. Additional indicators identify status of control outputs, alarm outputs, A/M mode selection, Autotuning status. Configuration parameters are divided into 7 groups, which are identified by 7 LEDs at the top of the display indicating each group name. During parameter configuration, the related group name LED is visible.

Easier to Configure

Two different configuration levels (Configuration mode and Normal operating mode) provide quick and easy access to parameters. A 4-digit security code prevents unauthorized changes. Selected parameters can also be hidden from the User to prevent mis-configuration.

Moisture Resistant Front

Meets NEMA 3R / IP54 front-face protection against dust and water.

Input Types

A single analog input supports eight different types of thermocouples and a RTD PT100 type input.

Universal Power Supply

The controllers can operate on any line voltage from 90 Vac to 264 Vac at 50/60 Hz. A 19.2 Vdc to 28.8 Vdc power supply model is available as an option.

Control Algorithms

Three control algorithms are available for specific application needs: ON/OFF Control, Time Proportional Control (PIDA or PIDB), Three Position Step Control. Alarm 1 output is set as the second control output when Three Position Step Control is used.

Alarm Capability

Two Alarm outputs are available for the EDC202 and EDC203 models. A single alarm output is available for EDC201. There are 10 configurable alarm modes for each alarm output.

Digital Input

One digital input is provided for remote dry contact closure to select one of the following actions:

- Direct controller action
- Disable keyboard
- Start Timer
- Auto/Manual mode switch
- Start/Stop Autotuning
- Alarm Acknowledge

Manual/Automatic Modes

In the Manual mode of operation, the operator directly controls the controller output level. In Auto mode, the control algorithm will generate the final control output automatically.

Autotune

Automatically determines the optimum PID parameters, which are then used with Accutune III algorithms to achieve a rapid process temperature rise or fall to the desired Set Point value with minimum overshoot and variation – precision in maintained control. Autotune is initiated on-demand, typically at initial process start-up.

Thermocouple Health

Diagnostic for identifying thermocouple input status condition.

Timer

Internal timer provides a configurable time-out period from 0 to 9 hours and 59 minutes. The Timer can be started by actuation of a button, use of a configured Digital Input, or by the output of Alarm2 for EDC202 and EDC203 models. The alarm output activates once the Timer times out. The time-out state can be reset with actuation of a button on the front panel.

Performance Specifications

| Specification Table | | |
|---|---|--|
| Control | Relay Output | Dry contact / N.O. 5 amps @ 30 VDC or 250 VAC |
| | SSR Driver Output | 24VDC/20mA |
| | Algorithm | ON-OFF |
| | | Time Proportional Three Position Step <i>(mutually exclusive with Alarm 1)</i> |
| Alarm | Output | Dry contact / N.O. 3 amps @ 30 VDC or 250 VAC |
| | Mode | PV |
| | | Deviation |
| | | PV Rate of Change |
| | | Control Output |
| | | Digital Input |
| | | Operation Mode |
| | | Thermocouple Warning |
| | | Thermocouple Fail |
| | | Failsafe |
| System Diagnostic | | |
| Digital Input | ON Sense Voltage | 13 VDC |
| | OFF Sense Voltage | 5 VDC |
| Display | PV/SP Indication | 4-digit, 7 segment display |
| Analog Inputs (One) <i>(See Table 1 for Input Actuations)</i> | <i>Accuracy:</i> $\pm 0.5\%$ of full scale typical (± 1 digit for display) <i>Sampling Rate:</i> 250 msec (TC), 350 msec (RTD) <i>Temperature Stability:</i> $\pm 0.01\%$ of Full Scale span / °C change typical <i>Input Impedance:</i> 10 megohms <i>Maximum Lead Wire Resistance:</i> Thermocouples: 50 ohms/leg 100 ohm, 200 ohm and 500 ohm RTD: 100 ohms/leg 100 ohm Low RTD: 10 ohms/leg | |
| Analog Input Signal Failure Operation | <i>Burnout Selections:</i> Upscale, Downscale, Failsafe or None <i>Thermocouple Health:</i> Good, Failing, Failure Imminent or Failed <i>Failsafe Output Level:</i> Configurable 0-100% of Output range | |
| Indicators | Alarm Relay Status | ALM 1 or 2 |
| | Control Mode | Auto or Manual |
| | Temperature Units | F or C |
| | Control Relay Status | Output |
| | Auto Tune Status | Running State |
| | Menu | 7 LED indicators |
| Approvals | CE | EMC: EN 61326-1 2006 Low Voltage Directive: EN 61010-1 2010 (Both are "Self Declared") |
| | UL | ANSI/UL 61010-1 Third Edition |
| | CSA | CAN/CSA-C22.2 No. 61010-1-12 Third Edition |

Input Actuations


| TC/RTD Type and Range | | | | |
|-----------------------|-------------------------------|---------------|-----------|-----------|
| | Sensor Type | Range (°C) | | |
| TC | E Thermocouple High | -270 to 1,000 | -9.835 mV | 76.373 mV |
| | J Thermocouple High | -18 to 871 | -0.886 mV | 50.060 mV |
| | K Thermocouple High | -18 to 1316 | -0.692 mV | 52.952 mV |
| | Ni-Ni-Moly Thermocouple High | 0 to 1371 | 0.000 mV | 71.773 mV |
| | Platinel II Thermocouple High | 0 to 1380 | 0.000 mV | 54.798 mV |
| | R Thermocouple | -18 to 1704 | -0.090 mV | 20.281 mV |
| | S Thermocouple | -18 to 1704 | -0.092 mV | 17.998 mV |
| | T thermocouple High | -184 to 371 | -5.341 mV | 19.097 mV |
| RTD | PT100(Low) | -184 to 149 | | |
| | PT100 | -184 to 649 | | |

| Environmental Characteristics | | | | |
|-------------------------------|--|-------------------------------|-------------------------------|-----------------------------------|
| Consideration | Reference | Rated | Operating Limits | Transportation and Storage Limits |
| Ambient Temp Range | 25 ± 3 °C 77 ± 5°F | 15 to +55°C 58 to 131°F | 0 to +55°C 32 to 131°F | -40 to +66°C -40 to 151°F |
| Relative Humidity | 10 to 55% (non condensing) (*) | 5 to 90% (non condensing) (*) | 5 to 90% (non condensing) (*) | 5 to 95%, (non condensing) (*) |
| Corrosives | G2 Standard - See ISA Standard S71.04 for Corrosive Environment Classification | | | |
| Front Protection | IP54 NEMA3R | IP54 NEMA3R | IP54 NEMA3R | IP54 NEMA3R |
| Vibration | | | | |
| Frequency (Hz) | 0 | 0 to 200 | 0 to 200 | 0 to 200 |
| Acceleration (g) | 0 | 0.6 | 0.6 | 0.5 |
| Mechanical Shock | | | | |
| Acceleration (g) | 0 | 5 | 5 | 20 |
| Duration (ms)) | 0 | 30 | 30 | 30 |


Notes: (*) The maximum relative humidity spec applies up to 40°C. Above 40°C the RH spec is de-rated to maintain constant moisture content.

Dimensions and Panel Cutout


Depth

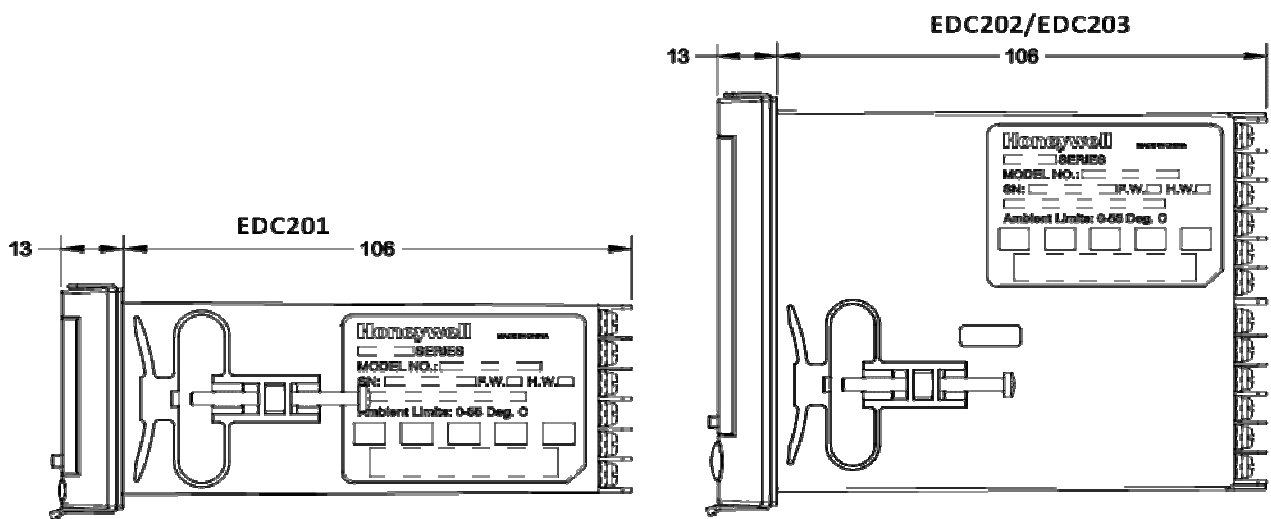

Front Panel Size

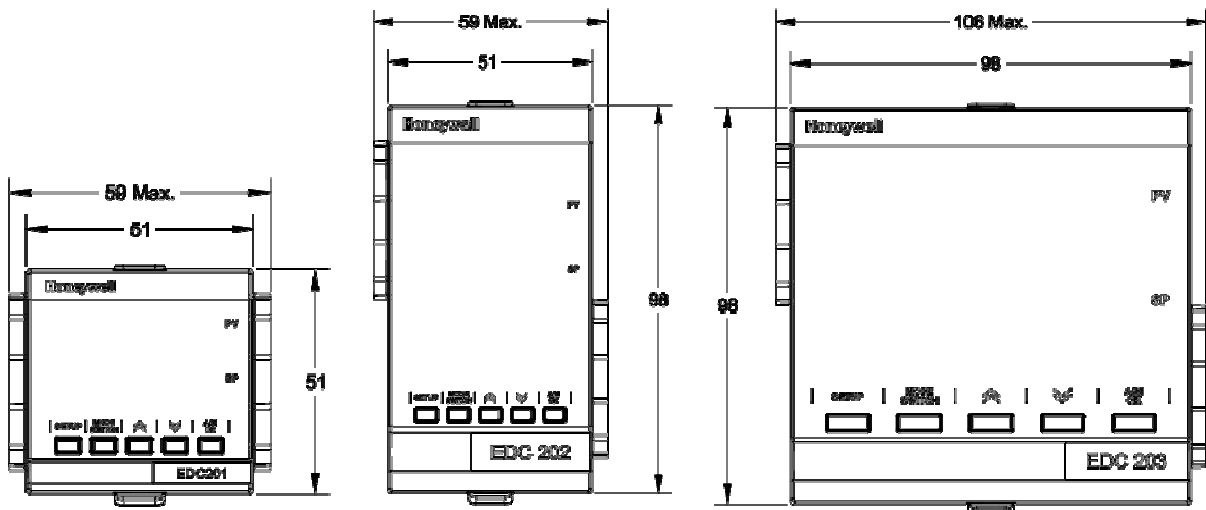

Panel Cutout

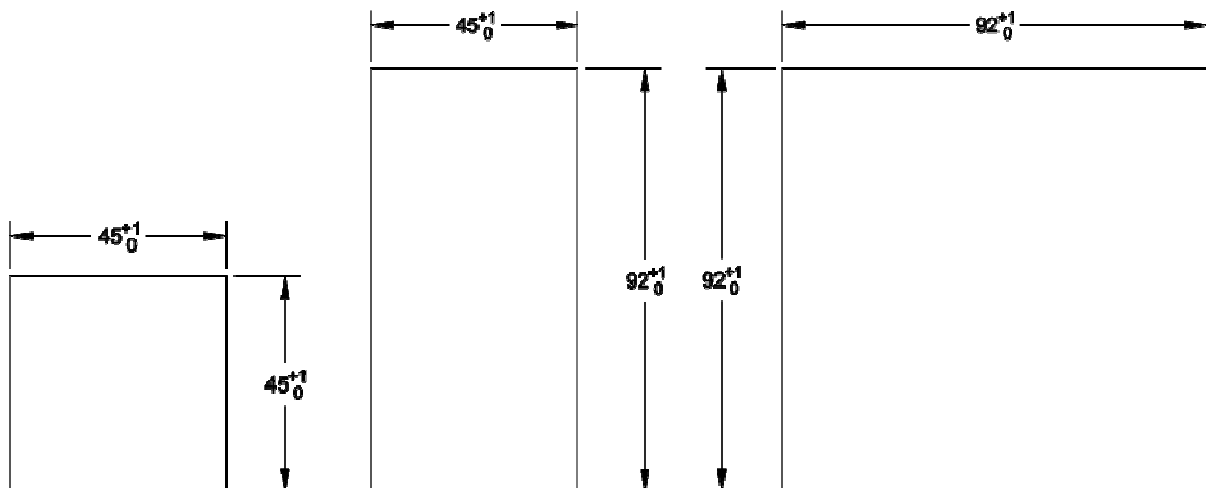

Faceplate


Navigation Bar: Setup group name displayed during configuration.

Upper display: 4 digits dedicated to display the Process Variable (PV). In configuration mode, this display indicates the name of the parameter.

Lower display: 4 digits dedicated to display the Set Point (SP). In configuration mode, this display indicates the value of the parameter selected.

LEDs:

| | |
|----------------|--|
| AT | Auto tuning running when ON. |
| MAN | Manual control mode when ON. Auto control mode when OFF. |
| OUT | Control output energized when ON. |
| ALM1 | ON when the pre-defined alarm activates. |
| (EDC202, 203): | |
| A/M | Auto control mode when "A" is ON. Manual control mode when "M" is ON. |
| ALM2 | ON when the pre-defined alarm activates. |

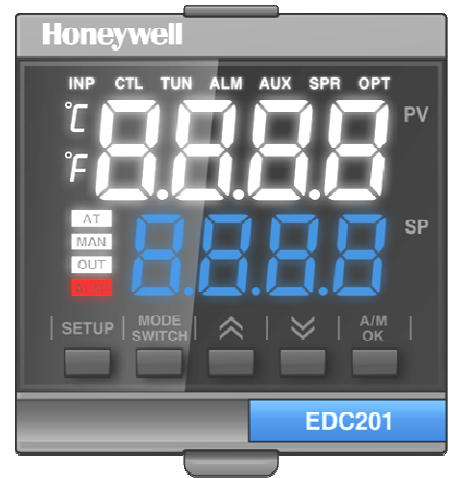

Keys:


SETUP: In Normal Operating Mode, long press enters into Configuration Mode. In Configuration Mode, long press returns to Normal Operating Mode, a short press cycles through the menu items.

Mode/Switch: In Normal Operating Mode, short press switches the lower display parameters or enables some functions. In Configuration Mode, short press to cycle through parameters in a set up group.

Down: Decrease value of a selected parameter or switch back to the previous item.

Up: Increase value of the selected parameter or switch to the next item.

MAN/OK: In Normal Operating Mode, enables switch of control mode when the value of "SP" or "OUT" is shown on the lower display; Acknowledge alarm or initiate functions when the information shown on the lower display is other than the value of "SP" or "OUT". In Configuration Mode, acknowledge actions.

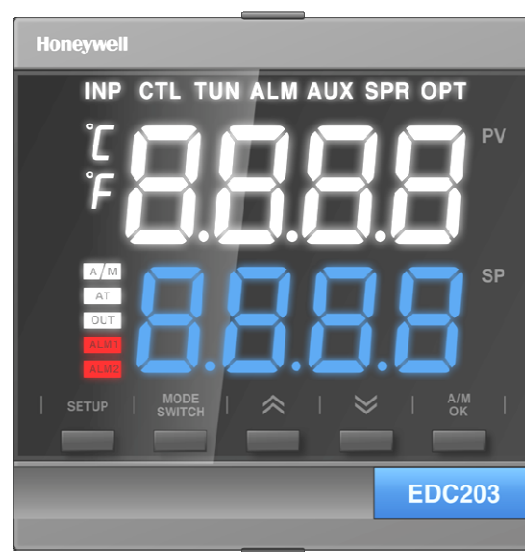

Display and Operation



| Area | Display/Button | Normal Operating Mode | Parameter Configuration Mode |
|------|-----------------|--|---|
| 1 | Menu Navigation | Not display | Current parameter group |
| 2 | Temp Unit | Display the unit of current temperature in use | |
| 3 | Status Display | Indicate the status of Alarm, control output, control mode and Auto-tuning | |
| 4 | Lower Display | Display the value of SP, output and the information of Timer, alarm and auto-tuning | Display the current option or value of the parameter |
| 5 | Upper Display | Display the value of process variable | Display the parameter selected |
| A | SETUP | Press and hold for 3s - Enter into Parameter Configuration Mode | Short press - Switch the Parameter group Press and Hold - Cycle through Parameter Groups |
| B | MODE SWITCH | Short press - Switch lower display | Short press - Switch parameter; Press and Hold - Cycle through parameters |
| C | ⤴ | Increase the value or change the options of selected parameter | |
| D | ⤵ | Decrease the value or change the options of selected parameter | |
| E | A/M OK | Switch control mode when the value of "SP" or "Out" is shown on the lower display; Acknowledge alarm or initiate functions when the information shown on the lower display is other than the value of "SP" or "Out" . | Acknowledge actions |

EDC200 Temperature Controller

Model Selection Guide
51-51-16-102 Issue
0.6

Special Features

- **Easysset Digital Controller**
- **Available in three (3) sizes: 1/16 DIN, 1/8 DIN, 1/4 DIN**
- **Analog input (AI) for thermocouples and RTDs**
- **Digital input (DI) and alarm relay outputs**
- **PID control with Honeywell Accutune (single button process tuning)**

Instructions

- Select the desired Key Number. The arrow to the right marks the selections available.
- Make one selection each from Tables I through III using the column below the proper arrow. A dot (•) denotes unrestricted availability. A letter denotes restricted availability.

Key Numbers

EDC20_ -

| |
|---|
| I |
|---|

 -

| |
|----|
| II |
|----|

KEY NUMBER

| Description | | Selection | Availability | | |
|-------------|---|-----------|--------------|---|---|
| Size | 48 x 48 mm (1/16 DIN), AI, DI, 1 alarm relay output | EDC201 | ↓ | | |
| | 48 x 96 mm (1/8 DIN), AI, DI, 2 alarm relay outputs | EDC202 | | ↓ | |
| | 96 x 96 (1/4 DIN), AI, DI, 2 alarm relay outputs | EDC203 | | | ↓ |

TABLE I

| | | | | | |
|----------------|---|-------|---|---|---|
| Power | 90-264 Vac Power | 0 _ _ | • | • | • |
| | 19-28 VDC Power | 1 _ _ | • | • | • |
| Control Output | Relay, Dry Contact / N.O., 5A @ 30 Vdc or 250 Vac | _ 0 _ | • | • | • |
| | SSR Drive, 24 VDC @ 20 mA | _ 1 _ | • | • | • |
| Future | None | _ _ 0 | • | • | • |

TABLE II

| | | | | | |
|--------|------|-----|---|---|---|
| Future | None | 0 _ | • | • | • |
| Future | None | _ 0 | • | • | • |

По вопросам продаж и поддержки обращайтесь:

Алматы (7273)495-231
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89
Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48

Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курган (3522)50-90-47
Курск (4712)77-13-04
Липецк (4742)52-20-81
Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Новосибирск (383)227-86-73
Ноябрьск(3496)41-32-12

Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Пермь (342)205-81-47
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саранск (8342)22-96-24
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35

Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35
Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Улан-Удэ (3012)59-97-51
Ульяновск (8422)24-23-59
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +7(7172)727-132

Киргизия +996(312)96-26-47

сайт: www.honeywell.nt-rt.ru || эл. почта: hwn@nt-rt.ru