

По вопросам продаж и поддержки обращайтесь:

Алматы (7273)495-231
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89
Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48

Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курган (3522)50-90-47
Курск (4712)77-13-04
Липецк (4742)52-20-81
Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Новосибирск (383)227-86-73
Ноябрьск(3496)41-32-12

Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Пермь (342)205-81-47
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саранск (8342)22-96-24
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35

Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35
Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Улан-Удэ (3012)59-97-51
Ульяновск (8422)24-23-59
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +7(7172)727-132

Киргизия +996(312)96-26-47

сайт: www.honeywell.nt-rt.ru || эл. почта: hwn@nt-rt.ru

ПРЕОБРАЗОВАТЕЛИ ЧАСТОТЫ

Технические характеристики на

HVC232/402



SmartVFD HVC232/402

Variable speed drives for induction- and permanent magnet motors, with built-in RFI filters. EMC and LVD compliant.

GENERAL

SmartVFD HVC232/402 variable frequency drives provide step less speed control for various applications:

- **Pumps**
- **Fans**
- **Compressor**

FEATURES

- Compact size - saves space in your equipment cabinet
- Models available up to 18.5 kW
- Permanent Magnet motor support
- Energy optimization feature
- Programmable FB (Fieldbus) process data
- Settable Limit supervisions
- Temperature measurement with temperature sensor option board OPTBH
- Flexible side-by-side mounting with screws or DIN-rail as standard for MI1-MI3 frame sizes
- Single rating suitable for both pump and fan or machine applications
- Maximum ambient temperature: ++50 °C for most drive
- Fire Mode feature
- Integrated RFI-filters
- Models available with Class C2 EMC filter
- Wide input and output connection possibilities
- Configurable inputs and outputs
- 30 second Start-Up Wizard
- Easy "keypad to remote" change with 1 button
- Parameter upload/download even without main power to the drive with COMP-LOADER and SmartDrive-USBC accessory
- Quiet motor operation with 4 kHz switching frequency
- Overtemperature ride-through
- Motor pre-heat
- Power ride-through
- Automatic restart
- Integrated PID controller
- COMP-IP21-KIT# kit , COMP-NEMA1-KIT#
- Built in RS-485 Modbus communication



SPECIFICATIONS

Mains Connection

Input voltage U_{in} :

208 ... 240 V, -15% ... +10% 1~
380 ... 480 V, -15% ... +10% 3~

Input frequency: 45 ... 66 Hz **Connection to mains:** Once per minute or less (normal case)

Supply Network

Networks:

SmartVFD HVAC232/402 cannot be used with corner grounded networks.

Short circuit current:

Maximum short circuit current has.

Motor Connection

Output voltage: 0 - U_{in}

Output current:

Continuous rated current I_N at ambient temperature

max. +50 °C (depends on the unit size), overload:

- 1.5 × I_N max
- 1 min / 10 min

Starting current/torque: Current 2 × I_N for 2 sec in every 20 sec period. Torque depends on motor.

Output frequency: 0...320 Hz

Frequency resolution: 0.01 Hz

Control connections

Digital input:

Positive, Logic 1: 18...+30 V, Logic 0: 0...5 V

Negative, Logic 1: 0...10 V, Logic 0: 18...30 V

R_i = 10 KΩ (floating)

Analogue input voltage: 0...+10 V, R_i = 250 KΩ

Analogue input current: 0(4)...20 mA, R_i ≤ 250 Ω

Analogue output: 0...10 V, R_L ≥ 1K Ω;
0(4)...20 mA, R_L ≤ 500 Ω,

Selectable through microswitch

Digital output:

Open collector, max. load 35 V/50 mA (floating)

Relay output:

Switching load: 250 Vac/3 A, 24 VDC 3 A

Auxiliary voltage: ±20 %, max. load 50 mA

Altitude:

100% load capacity (no derating) up to 3281 ft. (1000 m).

1% derating for each 328 ft. (100 m)

above 3281 ft. (1000 m); max. 6562 ft. (2000 m) **Relative**

humidity:

0...95% RH, non-condensing, non-corrosive,

no dripping water

Vibration: 3...150 Hz

EN60068-2-6:

Displacement amplitude 1 (peak) mm at 3...15.8 Hz Max
acceleration amplitude 1 G at 15.8...150 Hz

Shock

IEC 68-2-27: UPS Drop Test (for applicable UPS weights)

Storage and shipping: max 15 g, 11 ms (in package)

Enclosure class: IP20 for MI1-3, IP21 for MI4-5.

MI1...MI3 upgrade with COMP-NEMA1-KITx / COMP-NEMA1-KITx enclosure.

Pollution degree: PD2

Electromagnetic Compatibility

(EMC)

Immunity: Complies with EN50082-1, -2, EN61800-3

Emissions: 230 V: Complies with EMC category C2;

400 V: Complies with EMC category C2;

Safety:

For safety: EN61800-5, CE

For EMC: EN61800-3, CE

Protections

Overvoltage protection: Yes

Undervoltage protection: Yes

Earth-fault protection:

In case of earth fault in motor or motor cable, only the frequency converter is protected

Unit overtemperature protection: YES

Motor overload protection: YES

Motor stall protection (fan/pump blocked): YES

Motor underload protection

(pump dry / belt broken detection): YES

Short-circuit protection of +24V and +10V

reference voltages: YES

Overcurrent protection: Trip limit 4,0 × I_N instantaneously

Control Characteristics

Control method:

Frequency Control U / f

Open Loop Sensorless Vector Control

Switching frequency: 1...16 kHz; Factory default 4 kHz

Frequency reference: Resolution 0.01 Hz

Field weakening point: 30...320 Hz

Acceleration time: 0.1...3000 sec

Deceleration time: 0.1...3000 sec

Ambient Conditions

Operating temperature:

-10 °C (no frost)...+40/50 °C

(depends on the unit size): rated loadability I_N

Side by side installation for MI1-3 it is always (40 °C);

For IP21 frames or using COMP-IP21-KITx / COMP-

NEMA1-KITx kit options in MI1-3 the maximum

temperature is also 40°C)

Storage temperature: -40 °C...+70 °C

Air quality:

Chemical vapors:

IEC 721-3-3, unit in operation, class 3C2

Mechanical particles:

IEC 721-3-3, unit in operation, class 3S2

MODELS

Mains voltage 208-240 V

Table 1. Mains voltage 208-240 V, 50/60 Hz, 1~ series.

Part number	Rated loadability		Motor shaft power		Nominal input current [A]	Mechanical size	Weight [kg]
	100% continuous current IN [A]	150% overload current [A]	P [HP]	P [KW]			
HVAC232-P37-20	2,4	3,6	0,5	0,37	5,7	MI1	0,55
HVAC232-P55-20	2,8	4,2	0,75	0,55	6,6	MI1	0,55
HVAC232-P75-20	3,7	5,6	1,0	0,75	8,3	MI2	0,70
HVAC232-1P1-20	4,8	7,2	1,5	1,1	11,2	MI2	0,70
HVAC232-1P5-20	7,0	10,5	2,0	1,5	14,1	MI2	0,70
HVAC232-2P2-20*	9,6	14,4	3,0	2,2	22,1	MI3	0,99

* The maximum ambient operating temperature of this drive is 40 °C

Mains voltage 380-480 V

Table 2. Mains voltage 380-480 V, 50/60 Hz, 3~ series.

Part number	Rated loadability		Motor shaft power		Nominal input current [A]	Mechanical size	Weight [kg]
	100% continuous current IN [A]	150% overload current [A]	P [HP]	P [KW]			
HVAC402-P55-20	1,9	2,9	0,75	0,55	2,8	MI1	0,55
HVAC402-P75-20	2,4	3,6	1	0,75	3,2	MI1	0,55
HVAC402-1P1-20	3,3	5	1,5	1,1	4	MI2	0,70
HVAC402-1P5-20	4,3	6,5	2	1,5	5,6	MI2	0,70
HVAC402-2P2-20	5,6	8,4	3	2,2	7,3	MI2	0,70
HVAC402-3P0-20	7,6	11,4	4	3	9,6	MI3	0,99
HVAC402-4P0-20	9	13,5	5	4	11,5	MI3	0,99
HVAC402-5P5-20	12	18	7,5	5,5	14,9	MI3	0,99
HVAC402-7P5-21	16	24	10	7,5	17,1	MI4	8,68
HVAC402-11P-21	23	34,5	15	11	25,5	MI4	8,68
HVAC402-15P-21	31	46,5	20	15	33	MI5	11,07
HVAC402-18P-21	38	57	25	18,5	41,7	MI5	11,07

PRODUCT IDENTIFICATION CODE

HVAC 40 2 - 1P5 - 20

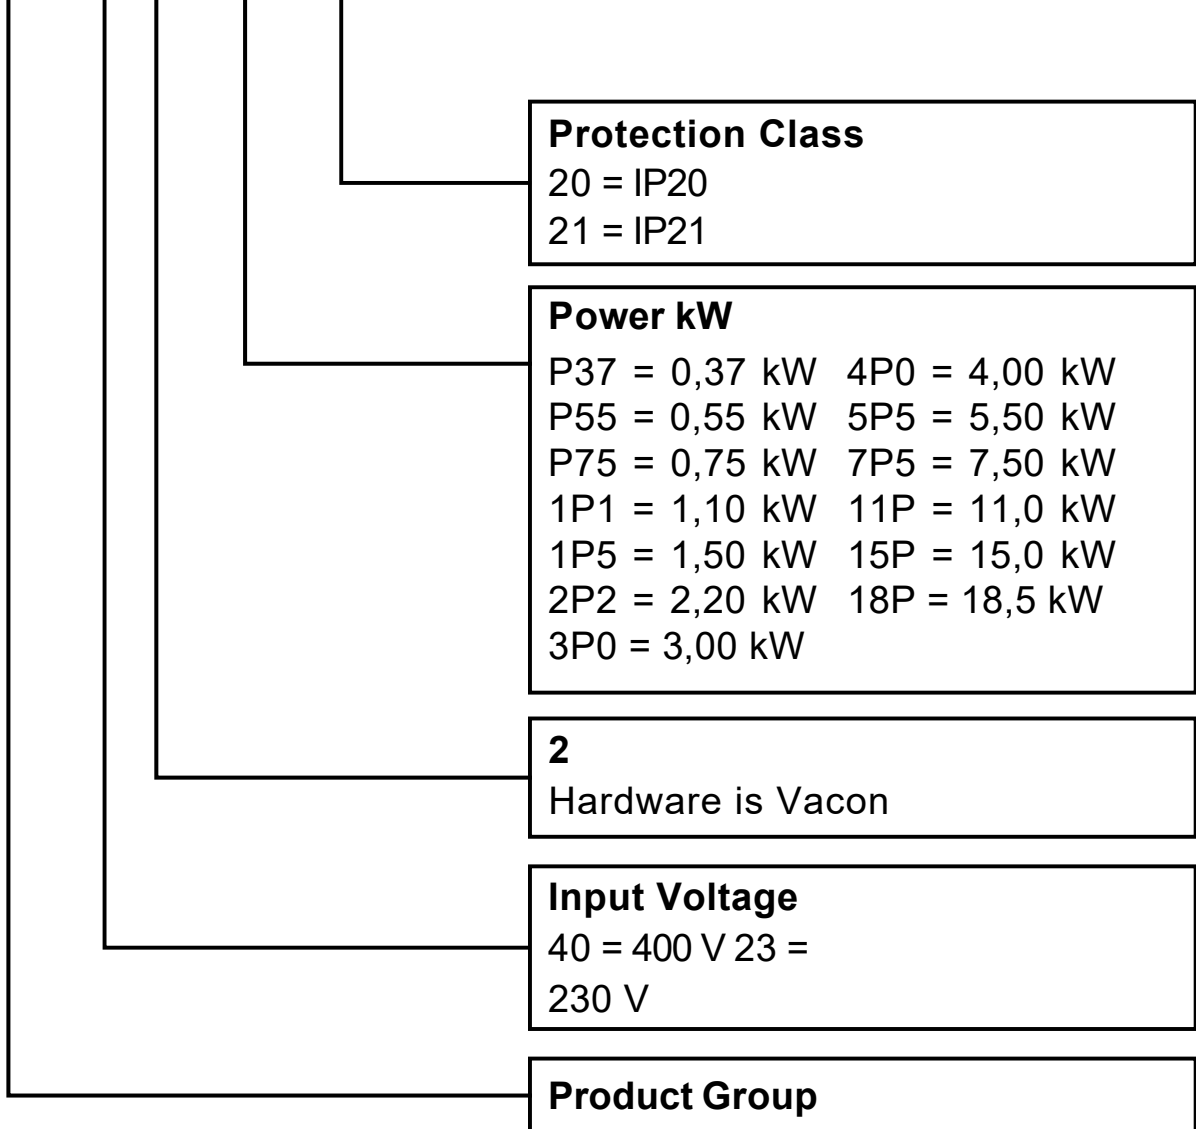


Fig. 1. SmartVFD HVAC232/402 type designation code.

MECHANICAL MOUNTING

There are two possible ways to mount SmartVFD HVAC232/402 in the wall.

- For MI1-MI3, either screw or DIN-rail mounting;
- For MI4-MI5, screw or flange mounting.

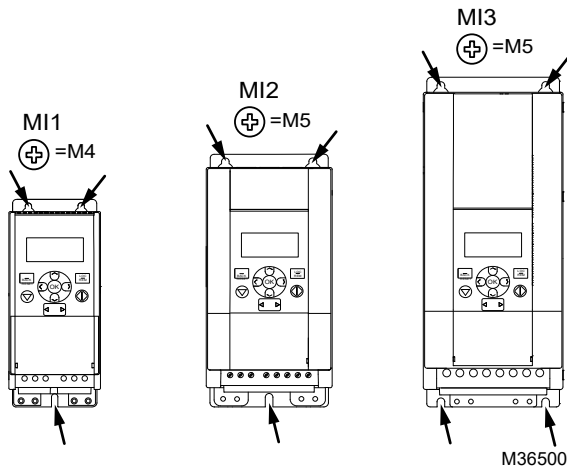


Fig. 2. Screw mounting, MI1 - MI3

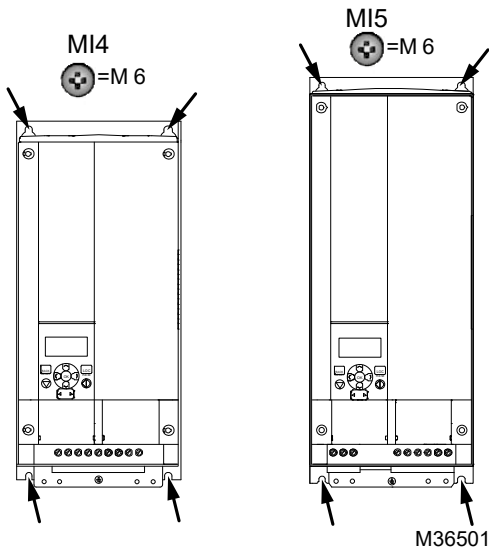


Fig. 3. Screw mounting, MI4 - MI5

i NOTE: See the mounting dimensions on the back of the drive. More details in Chapter.

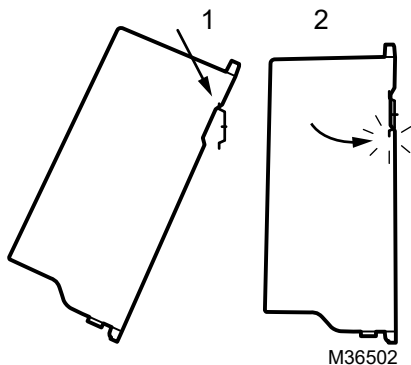


Fig. 4. DIN-rail mounting, MI1 - MI3

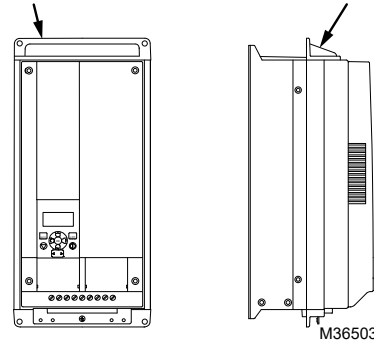


Fig. 5. Flange mounting, MI4 - MI5

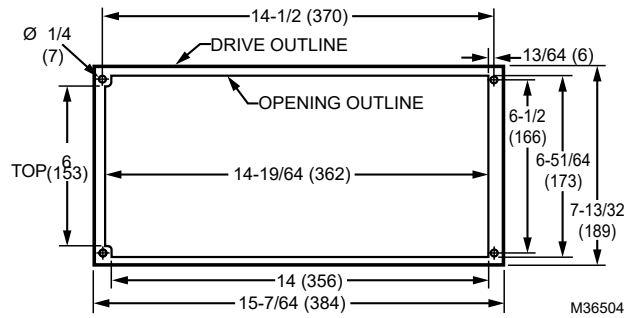


Fig. 6. Flange mounting cutout dimensions for MI4 [Unit: inches (mm)]

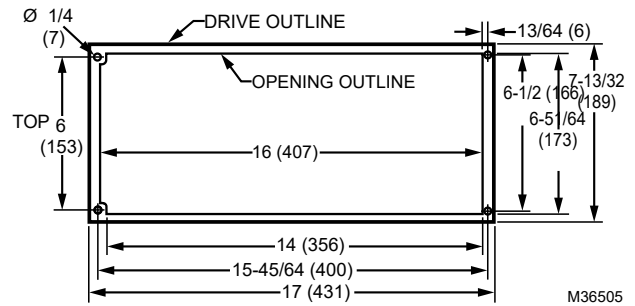


Fig. 7. Flange mounting cutout dimensions for MI5 [Unit: inches (mm)]

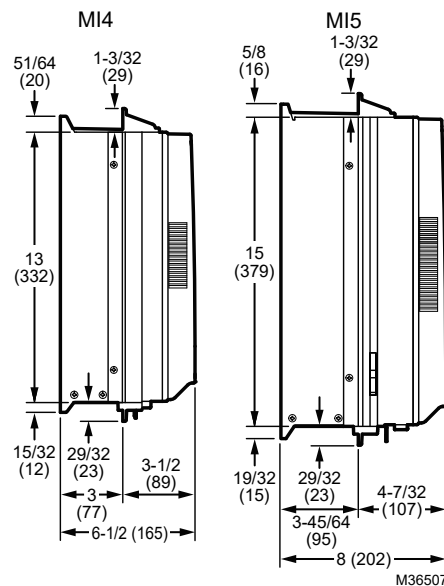


Fig. 8. Flange mounting cutout dimensions for MI5 [Unit: inches (mm)]

DIMENSIONS

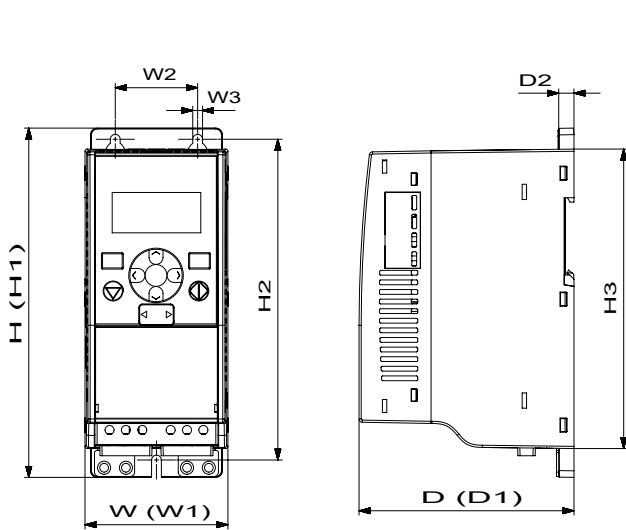


Fig. 9. SmartVFD HVAC232/402 dimensions, MI1 - MI3.

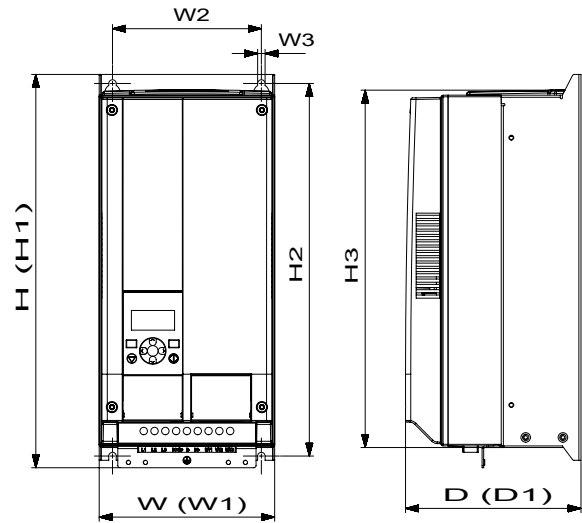


Fig. 10. SmartVFD HVAC232/402 dimensions, MI4 - MI5.

Table 6. SmartVFD HVAC232/402 dimensions in inches (mm).

Type	H1	H2	H3	W1	W2	W3	D1	D2
MI1	6.3 (160.1)	5.8 (147)	5.4 (137.3)	2.6 (65.5)	1.5 (37.8)	.18 (4.5)	3.9 (98.5)	.28 (7)
MI2	7.7 (195)	7.2 (183)	6.7 (170)	3.5 (90)	2.5 (62.5)	.22(5.5)	4 (101.5)	.28 (7)
MI3	10 (254.3)	9.6 (244)	9.0 (229.3)	3.9 (100)	3.0 (75)	.22 (5.5)	4.3 (108.5)	.28 (7)
MI4	14.6 (370)	13.8 (350.5)	13.2 (336.5)	6.5 (165)	5.5 (140)	.28 (7)	6.5 (165)	-
MI5	16.3 (414)	15.7 (398)	15.1 (383)	6.5 (165)	5.5 (140)	.28 (7)	8.0 (202)	-

Table 7. SmartVFD HVAC232/402 frame dimensions (mm) and weights in lbs (kg).

Frame	Dimensions in inches (mm)			Weight in lbs (kg.)*
	W	H	D	
MI1	2.6 (66)	6.3 (160)	3.9 (98)	1.1 (0.5)
MI2	3.5 (90)	7.7 (195)	4 (102)	1.6 (0.7)
MI3	3.9 (100)	10 (254.3)	4.3 (109)	2.2 (1)
MI4	6.5 (165)	14.6 (370)	6.5 (165)	17.7 (8)
MI5	6.5 (165)	16.3 (414)	8 (202)	22 (10)

* without shipping package

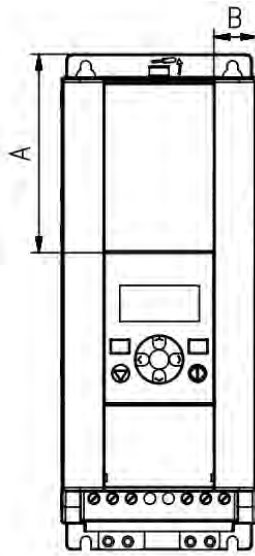


Fig. 11. SmartVFD HVAC232/402 dimensions, MI2 - 3 Display Location.

Dimensions in inches (mm)	Frame	
	MI2	MI3
A	.7 (17)	.9 (22.3)
B	1.7 (44)	4 (102)

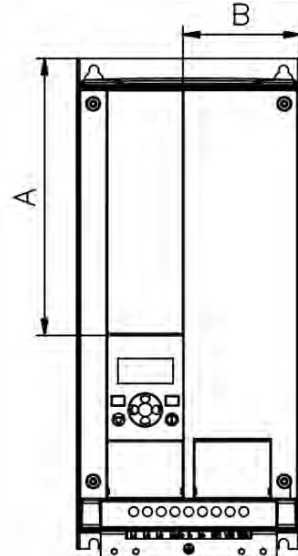


Fig. 12. SmartVFD HVAC232/402 dimensions, MI4 - 5 Display Location.

Dimensions in inches (mm)	Frame	
	MI2	MI3
A	8 (205)	9.8 (248.5)
B	3.4 (87)	3.4 (87)

COOLING

Enough free space shall be left above and below the frequency converter to ensure sufficient air circulation and cooling. You will find the required dimensions for free space in the table below.

If several units are mounted above each other the required free space equals C + D. Moreover, the outlet air used for cooling by the lower unit must be directed away from the air intake of the upper unit.

The amount of cooling air required is indicated below. Also make sure that the temperature of the cooling air does not exceed the maximum ambient temperature of the converter.

Table 8. Min. clearances around AC drive

Min clearance in inches (mm)				
Type	A*	B*	C	D
MI1	.8 (20)	.8 (20)	3.9 (100)	2 (50)
MI2	.8 (20)	.8 (20)	3.9 (100)	2 (50)
MI3	.8 (20)	.8 (20)	3.9 (100)	2 (50)
MI4	.8 (20)	.8 (20)	3.9 (100)	3.9 (100)
MI5	.8 (20)	.8 (20)	4.7 (120)	3.9 (100)

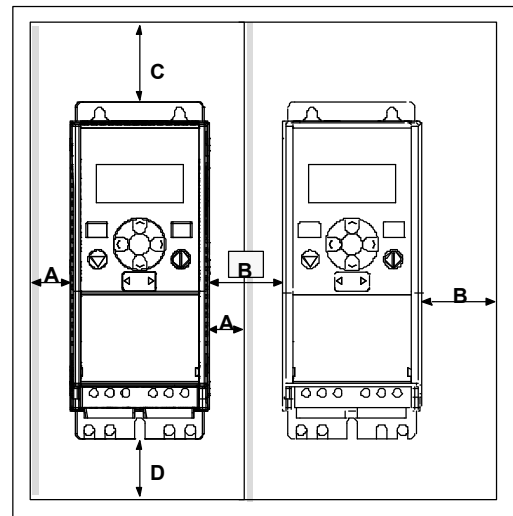


Fig. 13. Installation space.

FEATURES / FUNCTIONS

Easy to set-up features

Table 17.

Feature	Functions	Benefit
30 second Start-up wizard	Quick wizard allows you to set up basic parameters upon first power up of drive.	Speeds up drive set-up for basic parameters. Includes fire mode set-up.
"Keypad – Remote" Operation	Push the Local/Remote button.	Simple operation to change the control to manual (keypad) and back. Useful function when
Quick Setup Menu	Only the most commonly used parameters are visible in basic view to provide easier navigation. The full view can be seen after P16.2 in SmartVFD HVAC232/402 Parameter conceal is deactivated by changing the value to 0.	Easier navigation and testing the most applications parameters
SmartVFD HVAC232/402 Commissioning Tool	1. Parameter sets can be uploaded and downloaded with this tool. 2. Easy to use PC-tool for commissioning the SmartVFD HVAC232/402 Inverters. Connection with SmartDrive-	Parameter copying easily from 1 inverter to another. Easy download of parameter sets created with PC-tool Parametering with PC Saving settings to PC Comparing parameter settings

Compact and robust design with easy installation

Table 18.

Feature	Functions	Benefit
Compact size	Minimum free space above and below the drive is required for cooling airflow.	Minimum space requirements
Integrated RFI-filters	The part numbers comply with EN61800-3 category C2 as standard. This level is the required level for public electricity networks such as buildings	Easy selection and installation of products. Space savings Cost savings
Max. ambient temperature +50 °C	High maximum ambient operating temperature	Uninterruptible operation
(Side by side) mounting with screws or DIN-rail as standard	SmartVFD HVAC232/402 MI1-MI3 can be mounted side by side with no space between the units either with screws or on DIN-rail as standard. (For MI4-MI5, side to side installation is not allowed and there is no DIN rail option.) Dimensions for screw mounting can be found also on the back of the inverter.	Easy installation Space savings

Uninterruptible operation functions

Table 19.

Feature	Functions	Benefit
Overtemperature ride-through	Automatically adjusts switching frequency to adapt to unusual increase in ambient	Uninterruptible operation
Power ride-through	Automatically lowers motor speed to adapt to sudden voltage drop such as power loss	Uninterruptible operation
Auto restart function	Auto restart function can be configured to make VFD restart automatically once fault is addressed	Uninterruptible operation

VFD and motor control features

Table 20.

Feature	Functions	Benefit
Flying start	Ability to get an already spinning fan under speed control	Improved performance Ease
Inbuilt PID controller	Capability to make a standalone system with sensor connected directly to the inverter for complete PI- control.	Cost saving of application

OPTIONAL ACCESSORIES

Table 21.

Part Number	Door mounting kit and PC interface
HVACDOORKIT	SmartVFD HVAC232/402 door mounting kit
SmartDrive-USBC	SmartVFD HVAC232/402 Commissioning Cable
COMP-LOADER	Interface used for PC communication with SmartDrive-USBC

Table 22.

Option boards (all boards are varnished)	
OPTB1	6 x DI/DO, each I/O can be individually
OPTB2	2 x Relay output + Thermistor
OPTB4	1 x AI, 2 x AO (isolated)
OPTB5	3 x Relay output
OPTB9	1 x RO, 5 x DI (42-240 VAC)
OPTBH	3 x Temperature measurement (support for PT100, PT1000, NI1000, KTY84-130, KTY84-150, KTY84-131 sensors)
OPTE9	ModbusTCP

Table 23

Option boards covers	
ENC-Slot MI1-MI3	External cover kit HVAC232/402 MI1-MI3
ENC-Slot MI4-MI5	Internal cover kit HVAC232/402 MI4-MI5

Table 24.

Optional enclosures	
COMP-IP21-KIT1	Upgrade enclosure MI1 frame
COMP-IP21-KIT2	Upgrade enclosure MI2 frame
COMP-IP21-KIT3	Upgrade enclosure MI3 frame
COMP-NEMA1-KIT1	IP21 enclosure upgrade kit with additional wiring terminal cover for SmartDrive Compact size MI1
COMP-NEMA1-KIT2	IP21 enclosure upgrade kit with additional wiring terminal cover for SmartDrive Compact size MI2
COMP-NEMA1-KIT3	IP21 enclosure upgrade kit with additional wiring terminal cover for SmartDrive Compact size MI3

По вопросам продаж и поддержки обращайтесь:

Алматы (7273)495-231
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89
Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48

Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курган (3522)50-90-47
Курск (4712)77-13-04
Липецк (4742)52-20-81
Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Новосибирск (383)227-86-73
Ноябрьск(3496)41-32-12

Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Пермь (342)205-81-47
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саранск (8342)22-96-24
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35

Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35
Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Улан-Удэ (3012)59-97-51
Ульяновск (8422)24-23-59
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +7(7172)727-132

Киргизия +996(312)96-26-47

сайт: www.honeywell.nt-rt.ru || эл. почта: hwn@nt-rt.ru