

По вопросам продаж и поддержки обращайтесь:

**Алматы** (7273)495-231  
**Ангарск** (3955)60-70-56  
**Архангельск** (8182)63-90-72  
**Астрахань** (8512)99-46-04  
**Барнаул** (3852)73-04-60  
**Белгород** (4722)40-23-64  
**Благовещенск** (4162)22-76-07  
**Брянск** (4832)59-03-52  
**Владивосток** (423)249-28-31  
**Владикавказ** (8672)28-90-48  
**Владимир** (4922)49-43-18  
**Волгоград** (844)278-03-48  
**Вологда** (8172)26-41-59  
**Воронеж** (473)204-51-73  
**Екатеринбург** (343)384-55-89  
**Иваново** (4932)77-34-06  
**Ижевск** (3412)26-03-58  
**Иркутск** (395)279-98-46  
**Казань** (843)206-01-48

**Калининград** (4012)72-03-81  
**Калуга** (4842)92-23-67  
**Кемерово** (3842)65-04-62  
**Киров** (8332)68-02-04  
**Коломна** (4966)23-41-49  
**Кострома** (4942)77-07-48  
**Краснодар** (861)203-40-90  
**Красноярск** (391)204-63-61  
**Курган** (3522)50-90-47  
**Курск** (4712)77-13-04  
**Липецк** (4742)52-20-81  
**Магнитогорск** (3519)55-03-13  
**Москва** (495)268-04-70  
**Мурманск** (8152)59-64-93  
**Набережные Челны** (8552)20-53-41  
**Нижний Новгород** (831)429-08-12  
**Новокузнецк** (3843)20-46-81  
**Новосибирск** (383)227-86-73  
**Ноябрьск**(3496)41-32-12

**Омск** (3812)21-46-40  
**Орел** (4862)44-53-42  
**Оренбург** (3532)37-68-04  
**Пенза** (8412)22-31-16  
**Пермь** (342)205-81-47  
**Петрозаводск** (8142)55-98-37  
**Псков** (8112)59-10-37  
**Ростов-на-Дону** (863)308-18-15  
**Рязань** (4912)46-61-64  
**Самара** (846)206-03-16  
**Санкт-Петербург** (812)309-46-40  
**Саранск** (8342)22-96-24  
**Саратов** (845)249-38-78  
**Севастополь** (8692)22-31-93  
**Симферополь** (3652)67-13-56  
**Смоленск** (4812)29-41-54  
**Сочи** (862)225-72-31  
**Ставрополь** (8652)20-65-13  
**Сургут** (3462)77-98-35

**Сыктывкар** (8212)25-95-17  
**Тамбов** (4752)50-40-97  
**Тверь** (4822)63-31-35  
**Тольятти** (8482)63-91-07  
**Томск** (3822)98-41-53  
**Тула** (4872)33-79-87  
**Тюмень** (3452)66-21-18  
**Улан-Удэ** (3012)59-97-51  
**Ульяновск** (8422)24-23-59  
**Уфа** (347)229-48-12  
**Хабаровск** (4212)92-98-04  
**Чебоксары** (8352)28-53-07  
**Челябинск** (351)202-03-61  
**Череповец** (8202)49-02-64  
**Чита** (3022)38-34-83  
**Якутск** (4112)23-90-97  
**Ярославль** (4852)69-52-93

**Россия** +7(495)268-04-70

**Казахстан** +7(7172)727-132

**Киргизия** +996(312)96-26-47

сайт: [www.honeywell.nt-rt.ru](http://www.honeywell.nt-rt.ru) || эл. почта: [hwn@nt-rt.ru](mailto:hwn@nt-rt.ru)

# ДОЗИРУЮЩЕЕ ОБОРУДОВАНИЕ

## Технические характеристики на

### Fusion4 MSC-L



The MSC-L controls up to six loading arms simultaneously for precise, safe and reliable loading and transfer of high value product at road loading, rail, and marine terminals, as well as tank farms. Custody transfer approved and suitable for hazardous areas, it brings Fusion4's unique, intuitive user-experience to the loading operation.

# Uncompromising Control

## Smarter Control: the Fusion4 Interface

The MSC-L uses a smart, "app-driven" interface to leverage users' familiarity with smart phones and tablet computer technology. Self-explanatory graphical on-screen icons make it uniquely intuitive to operate, drastically cutting training times and human error.

Users benefit from complete visibility and control of all major functions in the field with little or no training. Tanker drivers can quickly and simply input and control their loading requirements. Real time dynamic displays with status bar guidance and transfer progress status indicators provide at-a-glance monitoring of all loading operations.

## Tailored to the Operation

With the world's most advanced multi stream controller users can configure the level of detail displayed to meet operators' requirements and choose from over 15 languages.

FlexFlow – a configurable workflow function – enables users to choose customer-specific operational sequencing for a tailored, smooth user experience that adapts to the operation.

## Scalable and Modular

Control for up to 24 meter streams simultaneously helps you do more with less. A modular design allows common building blocks to be added to meet basic or sophisticated operational requirements for a cost effective solution.

In addition, the integrated additive and blend capability allows the free configurability of meter inputs to be assigned as blend streams or additive streams, in either single pulse or dual pulse configuration, as the user sees fit, for the most comprehensive solution in the industry.

## Optimized System Connectivity

A wide range of protocol libraries and communication network capabilities and optimized electronic integration allow seamless connectivity with industry standard terminal automation systems, protecting existing investments.

## Powerful Alarm Handling

Fusion4's advanced alarm handling monitors nearly twice as many parameters as any other device, while its large color screen clearly annunciates and differentiates all alarm conditions, for a safe, reliable operation. User configurable alarms provide additional flexibility, allowing the operator to quickly select both the alarm conditions and define alarm messaging through the menu structure.

- Rail Loading
- Road Loading
- Aviation Refuelling
- Storage Transfers
- Marine Bunkering
- Pipeline Transfers
- Transport Bunkering
- Unloading

## Set up and Maintenance

Starting up in under a minute, the MSC-L features live upgrades, calibration wizards and configurable I/O to assign functions to any input or output for faster installation and set-up. Real-time stream, I/O type and system diagnostics keep the operation running smoothly, while the Fusion4 Portal software helps achieve the highest standards of reliability. Its features include remote monitoring, configuration and printing of all MSC transactions, alarms and communication status via Ethernet or Serial comms.

## Full Featured

### Full color screen and keyboard:

Intuitive monitoring and control using the Fusion4 interface.

### Rapid start-up:

In under a minute with the Calibration Wizard and quick configuration.

### Zero-downtime:

Firmware upgrades live in the field with the LAD.

### Configurable, expandable I/O:

For flexible operations.

### Advanced alarm handling:

Monitor nearly twice as many control parameters as any other device.

### Real-time diagnostics:

Live stream, I/O type, and system diagnostics.

### Multiple language support:

English (US), English (UK), French, German, Spanish, Dutch, Chinese (simplified), Japanese, Polish, Italian, Portuguese, Swedish, Thai, Russian, Arabic, Brazilian Portuguese and Turkish.





## Secure

- Multi level security access
- External, sealable weights & measures switch
- Separate enclosure security seal
- Onboard Event recording
- On screen W&M compliance icon
- On screen device locked icon (system menu)
- Downloadable proving record

## Connect

- 7 Serial Port
- 3 Ethernet Ports
- Hazardous area LAD – local access device – service tooling
- MiniPak IR Controller backward compatibility
- Fusion4 Portal – remote printing, monitoring, configuring and diagnostics software
- Terminal Manager TAS integration
- RIT Panel interfacing

## UX

- 8" Super WVGA colour LCD screen, 16:9 aspect ratio.
- Auto brightness – Ambient light sensor
- Onboard user selectable language library
  - English (US), English (UK), French, German, Spanish, Dutch, Chinese (simplified), Japanese, Polish, Italian, Portuguese, Swedish, Thai, Russian, Arabic, Brazilian Portuguese and Turkish
- Onboard petrochemical product icon library (EU, US)
- Configurable progress bar product colours
- Configurable progress screen dynamic data elements
- On screen user prompting

## Maintain



- Dual redundancy power supplies
- Real time, on screen load profile graphs
- Simulated DCV mode
- Diagnostic Dashboard
- Serial & Ethernet diagnostics
- I/O switch count
- Service due reminder

## Install

- Base and rear mountable
- Single plane wiring area
- High/low voltage separation
- Colour coded terminal connectors
- Easy-pull tabbed terminal connectors
- Integrated termination floor plan inside enclosure
- Anti cross-over board connectors
- Metric and Imperial gland arrangements
- Captured cover bolts
- Lifting eyes

## Configure

- Configure remotely from Fusion4 Portal
- Configure in the field with LAD upload
- Free form User defined IO functions
- Configurable batch set up workflow
- Programmable alarms

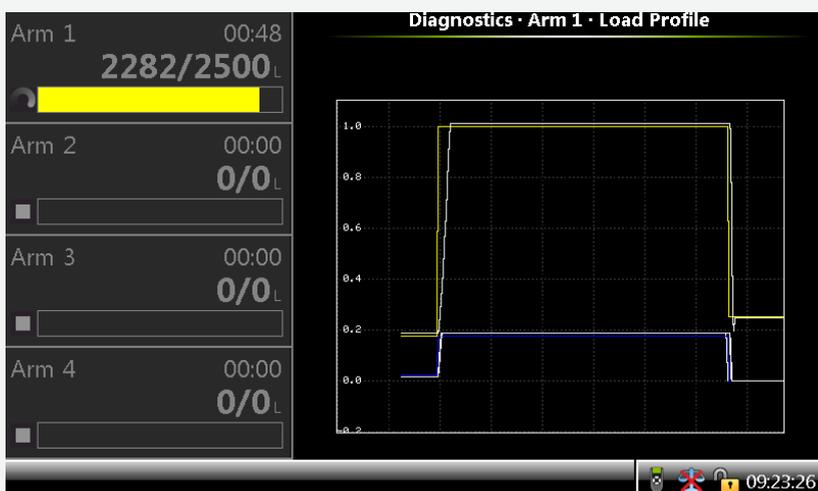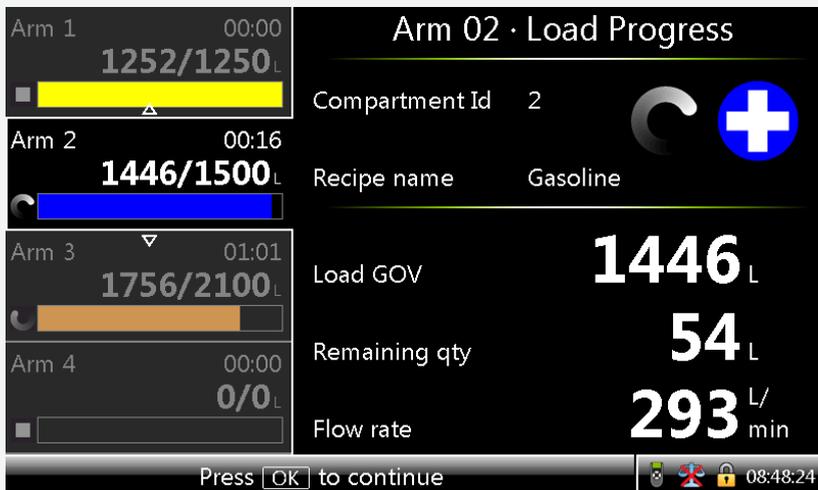

## Loading Configurations

### Straight Product Loading


- 1 to 6 arms simultaneous

### Ratio & Side Stream Blending

- In addition to load arm assignments -  
Up to 18 blend streams assigned per device. Up to 6 blend streams assigned per arm. Up to 3 blend streams used simultaneously per batch.

### Additive Injection

- In addition to load arm assignments -  
Up to 36 internally controlled additive injectors assigned per device. Up to 12 internally controlled additive injectors assigned per arm. Up to 6 internally controlled additive injectors used simultaneously per batch.

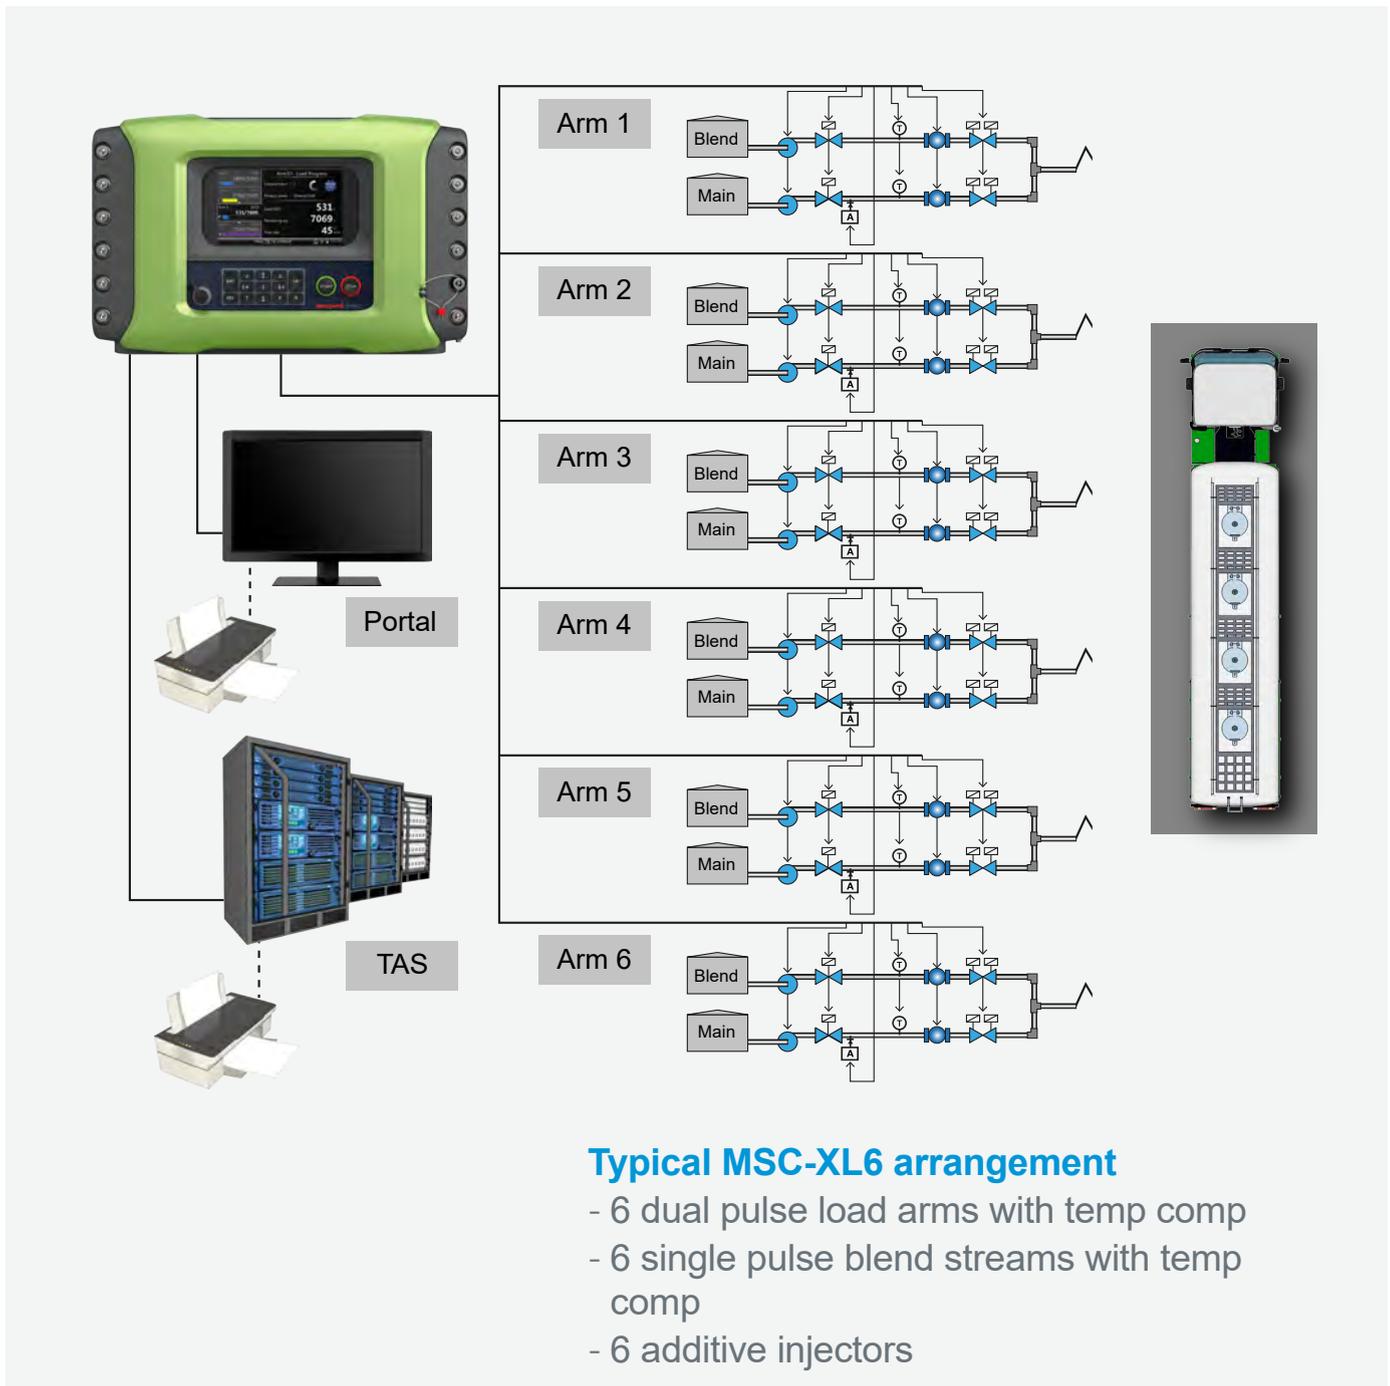

## Licensing and I/O Tables

	MSC - L1	MSC - L2	MSC - L3	Hardware							
	1 Load Arm +10 SPI Flexible Blend & Additive*	2 Load Arms +8 SPI Flexible Blend & Additive*	3 Load Arms +6 SPI Flexible Blend & Additive*	Back-Plane 1 1 CAN-PSF 1 CAN-HMI 1 CAN-ARM							
	Single Pulse Inputs (SPI) DI-DC available on unused S-PI	PO	DO-SSR	DO-EMR	DI-AC	DI-DC Also see SPI's	RTD	AI	AO	COMMS	ETHER
License L1 – L3 Standard I/O	12	2	12	0	2	0	3	7	1	5	2
Plus 1 CAN-IN-OUT	12	2	16	10	3	15	3	7	2	5	2
Plus 2 CAN-IN-OUT	12	2	20	20	6	30	3	7	3	5	2

\* Max 6 Blend per Arm

	MSC - XL1	MSC - XL2	MSC - XL3	MSC - XL4	MSC - XL5	MSC - XL6	Hardware				
	1 Load Arm +22 SPI Flexible Blend & Additive*	2 Load Arms +20 SPI Flexible Blend & Additive*	3 Load Arms +18 SPI Flexible Blend & Additive*	4 Load Arms +16 SPI Flexible Blend & Additive*	5 Load Arms +14 SPI Flexible Blend & Additive*	6 Load Arms +12 SPI Flexible Blend & Additive*	Back-Plane 1 & 2 2 CAN-PSF 1 CAN-HMI 2 CAN-ARM				
	Single Pulse Inputs (SPI) DI-DC available on unused S-PI	PO	DO-SSR	DO-EMR	DI-AC	DI-DC Also see SPI's	RTD	AI	AO	COMMS	ETHER
License XL1 – XL6 Standard I/O	24	4	24	0	0	0	6	14	2	7	3
Plus 1 CAN-IN-OUT	24	4	28	10	3	15	6	14	3	7	3
Plus 2 CAN-IN-OUT	24	4	32	20	6	30	6	14	4	7	3
Plus 3 CAN-IN-OUT	24	4	36	30	9	45	6	14	5	7	3
Plus 4 CAN-IN-OUT	24	4	40	40	12	60	6	14	6	7	3

\* Max 12 Add, 6 Blend



### Nine licenses available

- - 3 standard (L) licenses (1 to 3 load arms)
  - - 6 enhanced (XL) licenses (1 to 6 load arms)
- Each license permits the configuration of the appropriate number of load arms, plus, the user defined configuration of remaining SPI's as blend or additive streams, as required.

## Technical Specifications

Approvals		MSC	
ATEX	II 2 G Ex d [ia] IIB T6 Gb		
IECEX	Ex d [ia] IIB T6		
FM	Class1 Div1 Group C&D T6		
CSA/C <sub>UL</sub>	Class1 Div1 Group C&D T6		
CCOE	Ex d [ia] IIB T6		
INMETRO	Ex d [ia] IIB T6 Gb		
Environmental		ATEX/IECEX	FM/CSA
Operating Temperature	-40 °C to +65 °	-40 °F to +185 °F	
Storage Temperature	-40 °C to +85 °C	-40 °F to +185 °F	
Protection Class	IP66	IP66	
Humidity	5% - 95% Non-Condensing	5% - 95% Non-Condensing	
Materials			
Enclosure	Aluminium, Anodized	Aluminum, Anodized	
Connections			
Cable entries	6xM40, 6xM32, 2xM20	4x 1¼" NPT, 4x 1" NPT	
Electrical			
Voltage	88 to 264 Vac	88 to 264 Vac	
Flow Meter Inputs	24 x 5 kHz input Configurable as 12 dual	24 x 5 kHz input Configurable as 12 dual	
DC Inputs (max)	60	60	
AC Inputs (max)	12	12	
DC Outputs (max)	4	4	
DC/AC - EMR Outputs (max)	40	40	
AC - SSR Outputs (max)	40	40	
Analog Inputs (max)	14	14	
Analog Outputs (max)	6	6	
RTD's (max)	6	6	
RS 485 Comms Ports (max)	7	7	
Ethernet Ports	3	3	
Interfacing			
Serial Protocols	FlexConn, Modbus RTU, Slip+, FMC Smith		
Ethernet Protocols	FlexConn TCP/IP, Modbus TCP/IP		
Display	8" Super WVGA color TFT LCD screen		
Languages	English (US), English (UK), French, German, Spanish, Dutch, Chinese (simplified), Japanese, Polish, Italian, Portuguese, Swedish, Thai, Russian, Arabic, Brazilian Portuguese and Turkish		
Handheld Devices	Fusion4 LAD (local access device), Fusion4 IR Controller (Infra Red)		
Weights			
MSC-L	approx 53 kg	approx 115 lb	



## Accessories

Part Number	Description
323-1392002	Fusion4 LAD FM (Local Access Device)
323-1392003	Fusion4 LAD CSA (Local Access Device)
323-1392004	Fusion4 LAD ATEX & IECEX (Local Access Device)
10-31052	Fusion4 IR Controller (UL)
10-31052-F4	Fusion4 IR Controller (ATEX)
10-31052-F4X	Fusion4 IR Controller (IECEX)

По вопросам продаж и поддержки обращайтесь:

**Алматы** (7273)495-231  
**Ангарск** (3955)60-70-56  
**Архангельск** (8182)63-90-72  
**Астрахань** (8512)99-46-04  
**Барнаул** (3852)73-04-60  
**Белгород** (4722)40-23-64  
**Благовещенск** (4162)22-76-07  
**Брянск** (4832)59-03-52  
**Владивосток** (423)249-28-31  
**Владикавказ** (8672)28-90-48  
**Владимир** (4922)49-43-18  
**Волгоград** (844)278-03-48  
**Вологда** (8172)26-41-59  
**Воронеж** (473)204-51-73  
**Екатеринбург** (343)384-55-89  
**Иваново** (4932)77-34-06  
**Ижевск** (3412)26-03-58  
**Иркутск** (395)279-98-46  
**Казань** (843)206-01-48

**Калининград** (4012)72-03-81  
**Калуга** (4842)92-23-67  
**Кемерово** (3842)65-04-62  
**Киров** (8332)68-02-04  
**Коломна** (4966)23-41-49  
**Кострома** (4942)77-07-48  
**Краснодар** (861)203-40-90  
**Красноярск** (391)204-63-61  
**Курган** (3522)50-90-47  
**Курск** (4712)77-13-04  
**Липецк** (4742)52-20-81  
**Магнитогорск** (3519)55-03-13  
**Москва** (495)268-04-70  
**Мурманск** (8152)59-64-93  
**Набережные Челны** (8552)20-53-41  
**Нижний Новгород** (831)429-08-12  
**Новокузнецк** (3843)20-46-81  
**Новосибирск** (383)227-86-73  
**Ноябрьск**(3496)41-32-12

**Омск** (3812)21-46-40  
**Орел** (4862)44-53-42  
**Оренбург** (3532)37-68-04  
**Пенза** (8412)22-31-16  
**Пермь** (342)205-81-47  
**Петрозаводск** (8142)55-98-37  
**Псков** (8112)59-10-37  
**Ростов-на-Дону** (863)308-18-15  
**Рязань** (4912)46-61-64  
**Самара** (846)206-03-16  
**Санкт-Петербург** (812)309-46-40  
**Саранск** (8342)22-96-24  
**Саратов** (845)249-38-78  
**Севастополь** (8692)22-31-93  
**Симферополь** (3652)67-13-56  
**Смоленск** (4812)29-41-54  
**Сочи** (862)225-72-31  
**Ставрополь** (8652)20-65-13  
**Сургут** (3462)77-98-35

**Сыктывкар** (8212)25-95-17  
**Тамбов** (4752)50-40-97  
**Тверь** (4822)63-31-35  
**Тольятти** (8482)63-91-07  
**Томск** (3822)98-41-53  
**Тула** (4872)33-79-87  
**Тюмень** (3452)66-21-18  
**Улан-Удэ** (3012)59-97-51  
**Ульяновск** (8422)24-23-59  
**Уфа** (347)229-48-12  
**Хабаровск** (4212)92-98-04  
**Чебоксары** (8352)28-53-07  
**Челябинск** (351)202-03-61  
**Череповец** (8202)49-02-64  
**Чита** (3022)38-34-83  
**Якутск** (4112)23-90-97  
**Ярославль** (4852)69-52-93

**Россия** +7(495)268-04-70

**Казахстан** +7(7172)727-132

**Киргизия** +996(312)96-26-47

сайт: [www.honeywell.nt-rt.ru](http://www.honeywell.nt-rt.ru) || эл. почта: [hwn@nt-rt.ru](mailto:hwn@nt-rt.ru)